


Semi automatic Sample card winder



Marui Textile Machinery Co.,Ltd.2-1-15,Takadono,Asahi-ku,Osaka JAPANTEL (06)6923-2615FAX(06)6925-6597http://marusans.cominfo@marusans.com




Spring Tensioner

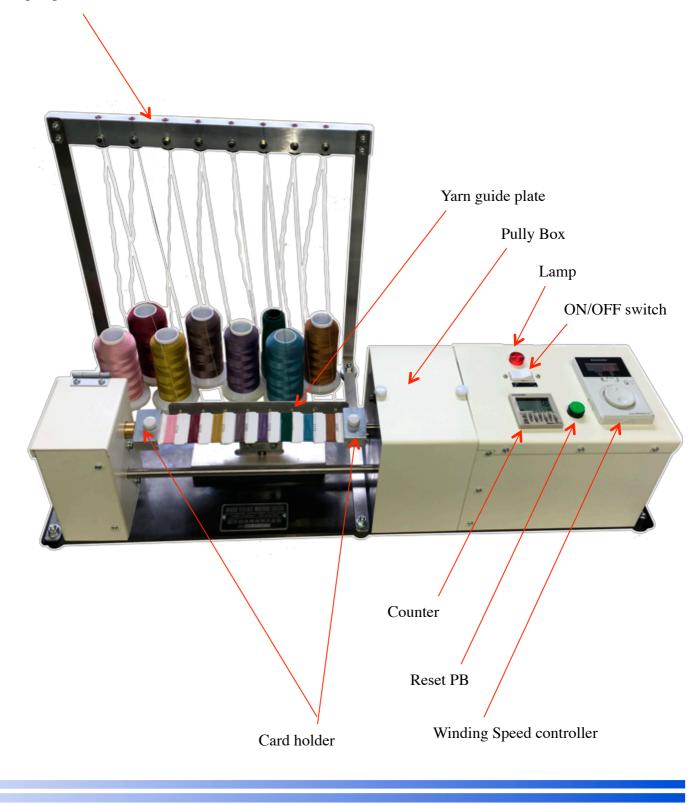

Adjust of Traverse guide plate

Move the traverse guide plate to the blue arrow direction.

This position is the start point of winding. Please start from this point every time.

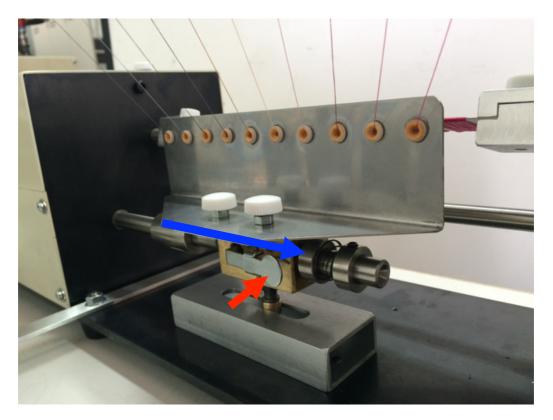


The traverse guide plate is tightened by the white head screw.






Adjust the winding pitch

Open the pulley box. Select the position of the pulley size by the yarn thickness. Move the orange belt to selected pulley.

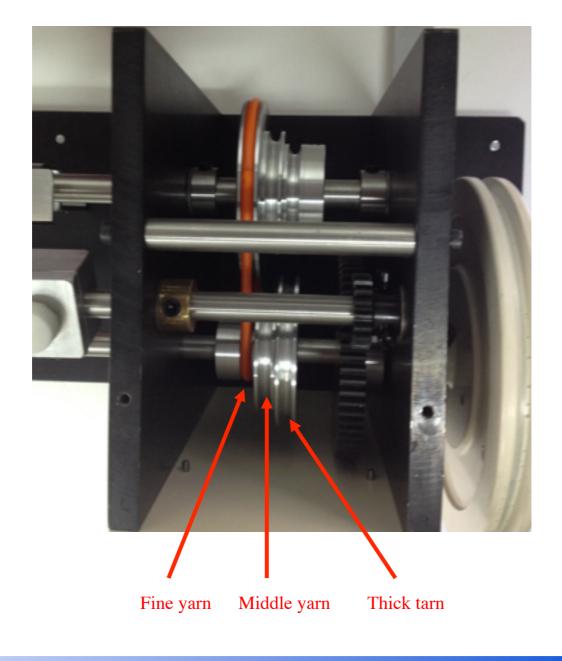



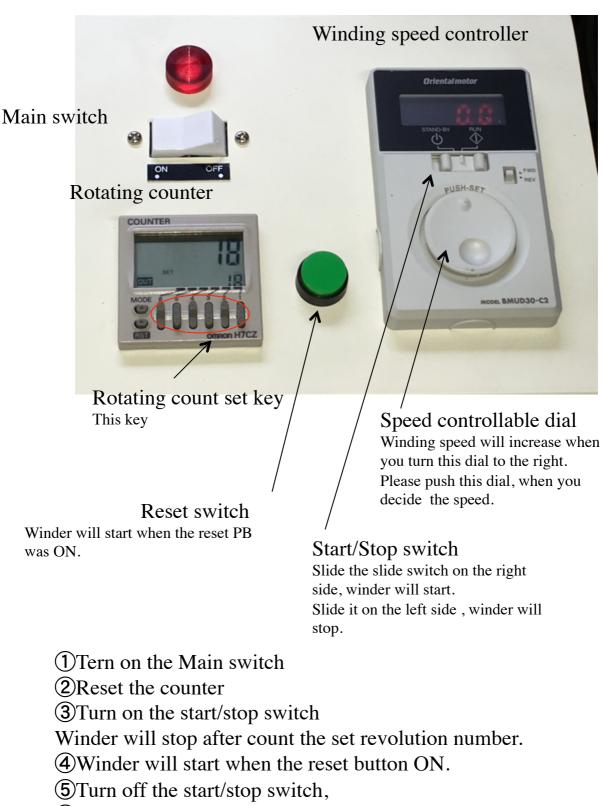

(6)Turn off the power switch.